Sony Service Centers

Arizona
Phoenix
2260 North Scottsdale Road
Tempe, AZ 85281
(602) 946-7888

California
Burbank
Burbank East Angeles area)
4500 Riverside Drive, Suite A
Burbank, CA 91505
(818) 842-7886

Costa Mesa (Orange County area)
2129 Bristol Street South
Costa Mesa, CA 92626
(714) 546-4832

San Diego (San Fernando area)
761 Camino Plaza
San Bruno, CA 94066
(415) 871-2810

San Diego
8578 Complex Drive
San Diego, CA 92123
(619) 279-5724

San Jose
1355 Old Oakland Road
San Jose, CA 95112
(408) 280-7666

Colorado
Denver
Harvard Place Center
10740 East 9th Avenue
Aurora, CO 80014
(303) 755-7666

Florida
Fort Lauderdale
2950 North 28th Terrace
Hollywood, FL 33020
(305) 920-5400

Georgia
Atlanta
120 Interstate North Parkway East
Suite 410
Atlanta, GA 30339
(404) 953-5571

Hawaii
Honolulu
932 Mapunapuna Street
Honolulu, HI 96819
(808) 834-6622

Illinois
Niles (Chicago area)
7840 North Caldwell Avenue
Niles, IL 60648
(312) 647-2400

Westmont (Chicago area)
8035 36 South Cass Avenue
Westmont, IL 60559
(312) 968-0049

Kansas
Kansas City
11712 West 95th Street
Overland Park
KS 66214
(913) 888-2622

Maryland (Washington D.C.)
Washington DC
1358 Nelson Lane
Langley Park, MD 20783
(301) 439 9666(01)

Massachusetts
Boston
390 University Avenue
128 Westwood Industrial Center
Westwood, MA 02090
(617) 329 8130

Michigan
Detroit
43304 Ewer Mile Road
Novi, MI 48050
(313) 344-4044

Minnesota
Minneapolis
4300 W 36 1/2 Street
St. Louis Park, MN 55416
(612) 930-9000

Missouri
St. Louis
12482 D Natural Bridge Road
Bridgeton, MO 63044
(314) 291-2301

New Jersey
Mahwah (NY Metropolitan Area)
368 Route 17 South
Mahwah, NJ 07430
(201) 529 1818

Moorestown (Philadelphia Area)
Sony Service Company
881 Park Avenue
King of Prussia, PA 19406
(215) 768 9845

Cherry Hill (Philadelphia Area)
Sony Service Company
1301 Route 70 East
Cherry Hill, NJ 08034
(609) 663 5550

New York
Amherst (Buffalo Area)
Sony Service Company
3495 Sheridan Drive
Amherst, NY 14226
(716) 839-3390

Farmingdale (Long Island Area)
Sony Service Company
1550 New Highway
Farmingdale, NY 11735
(516) 249-8550

Hauppauge (Long Island Area)
Sony Service Company
1500 Motor Parkway
Hauppauge, NY 11788
(516) 231-1630

Rochester
Sony Service Company
1225 Jefferson Road
Rochester, NY 14623
(716) 427-7740

Syracuse
Sony Service Company
5858 East Molloy Road
Syracuse, NY 13211
(315) 454-2100

Ohio
Cleveland
6310 Tim Road
Middleburg Heights, OH 44130
(216) 845-7668

Pennsylvania
Philadelphia
881 Park Avenue
King of Prussia, PA 19406
(215) 768 9830

Pittsburgh
Western Place
10800 Perry Highway (Rt. 19)
Wexford, PA 15090
(412) 935 9466

Texas
Dallas
401 Presson Valley Shopping Center
Dallas, TX 75230
(214) 661-9531

Houston
9747 Richmond Avenue
Houston, TX 77063
(713) 783 8781

Washington
Seattle
635 Postage
Seattle, WA 98108
(206) 762 6900

Sony District Service Offices

Western Zone

Western Division
Sony Service Company
2125 Brand Boxer South
Costa Mesa, CA 92626
(714) 549-6636

Northwestern Division
Sony Service Company
1356 Old Oakland Road
San Jose, CA 95112
(408) 280 7676

Southwestern Division
Sony Service Company
3301 Premier Dr. Suite 100
Irving, TX 75063
(214) 580-6370

Central Zone

Mid-West Division
Sony Service Company
7840 North Caldwell Avenue
Niles, IL 60648
(312) 647 2424

Sun Coastal Division
Sony Service Company
26300 Short Center Drive
Suite 300 Novi MI 48050
(313) 347 2281

Eastern Zone

Eastern Division
Sony Service Company
368 Route 17 South
Mahwah, NJ 07430
(201) 529 1818

Mid-Atlantic Division
Sony Service Company
881 Park Avenue
King of Prussia, PA 19406
(215) 768 9845

Southeastern Division
Sony Service Company
1500 Parkway
Suite 410
Atlanta GA 30339
(404) 953 5550

LIMITED WARRANTY

SONY CORPORATION OF AMERICA ("SONY") warrants this product against defects in material or workmanship, as follows:

1. For a period of 90 days from the date of retail purchase, SONY shall at its sole and absolute option either repair the defective product at no charge or replace the defective product with the same model or its equivalent model at no charge through a SONY SERVICE CENTER.

To obtain warranty service during the initial 90-day period, you must take the product, or deliver the product prepaid, to one of the SONY SERVICE CENTERS located in the United States.

2. After the initial 90-day period, SONY will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the date of retail purchase.

Labor for removal and installation of these parts is available from your SONY authorized service facility or SONY SERVICE CENTER, at your expense.

Proof of purchase in the form of a bill of sale or receipted invoice, which indicates that the product is within the warranty period, must be presented to obtain warranty service. SONY suggests that the purchaser retain the dealer's dated bill of sale as evidence of the date of retail purchase.

This warranty does not cover cosmetic damage, and damage to any part of the product, including the antenna, which results from acts of God, accident, misuse, abuse, improper maintenance, or connection to an improper voltage supply.

This warranty is valid only if the serial number appears on the product. This warranty is valid only in the United States of America.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership, or within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please refer to the list of SONY SERVICE CENTERS for the SONY SERVICE CENTER nearest you.

For your convenience, Sony Corporation of America has established the Customer Information Center to supply you with product or service information.

SONY CUSTOMER INFORMATION CENTER
201 930-SONY (7669)

or write to

SONY CUSTOMER INFORMATION CENTER
Sony Drive, Mail Drop M-1
Park Ridge, New Jersey 07656

SONY CORPORATION OF AMERICA
Sony Drive, Park Ridge, New Jersey 07656

Notes on batteries

- Remove the batteries when you will not use the unit for a long time to prevent damage from battery leakage and corrosion.
- The internal batteries are disconnected when you plug a cord into DC IN 3 V.
- When the sound becomes unstable, try a new set of batteries.

External power sources

The following external power sources can be connected through the DC IN 3 V jack (bottom).

- House current using an AC-D2L AC power adaptor
- 12 V car battery using a DCC-70 car battery cord
- Two R20 (size D) batteries using an EBP-5006 battery case

The illustration shows the polarity of DC IN 3 V jack.
Use only a power cord having the same polarity.

Handling your Walkman

- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave the unit in a car parked in the sun.
- **When the OFF switch is not turned automatically at the tape end The batteries are weak. Replace them with a new set of batteries.**

Tips on headphone listening

- Do not listen with headphones while driving, cycling, etc.
- Listen at a moderate volume to avoid damaging your ears and to avoid disturbing those close to you.

Maintenance

- Prolonged use may contaminate the tape head. If sound drop-outs or excessive noise occurs, clean the head and tape path with alcohol.
- Clean your headphone plug periodically for optimum sound.
- Do not use alcohol, benzine, or thinner to clean the case.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

Specifications

Radio
FM: 87.6—108 MHz
AM: 530—1,710 kHz

Power requirements
3 V DC Batteries R6 (AA) × 2
External DC 3 V power sources

Battery life (Approximate hours)

	Playback	FM
Sony Alkaline AM3 (N)	8 hrs.	30 hrs.

Accessories supplied
Belt clip (1)

Optional accessories
Stereo headphones (open-air type, 1)
AC power adaptor AC-D2L
Car battery cord DCC-70
Battery case EBP-5006

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information.

Design and specifications subject to change without notice.

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

"DOLBY" and the double-D symbol ⧈ are trademarks of Dolby Laboratories Licensing Corporation.

WM-F2061/F2065/F2068

Operating Instructions

WALKMAN is a trademark of Sony Corporation

Owner's Record

The model number is located on the bottom and the serial number is located inside the cassette holder. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

PROPERTY OF THE
NATIONAL TECHNICAL DEPT.
SILO 2007
Do not remove

©1990 by Sony Corporation Printed in Japan

You can:

— wear the Walkman on a belt.

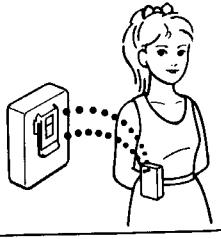



— improve radio reception.

FM

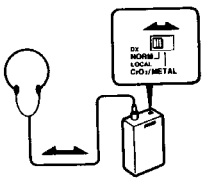

Extend the headphone cord or adjust the DX/LOCAL selector.

AM

Rotate the unit.

You should:

— clean the parts shown periodically.

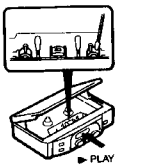

— run the unit for a few minutes before inserting a cassette if it has not been used for a long time.
— remove a cassette having a metallic shell or labels if interference in radio reception occurs.

We do not recommend:

— the use of cassettes longer than 90 minutes.

CASSETTE
MODE
R6 (AA) x 2
RADIO
TAPE RADIO (RADIO OFF)
NORM
CrO2/METAL
PLAY
VOLUME
WM-F2068
AM FM OFF DOLBY NR
• When playing Dolby NR processed tapes, set DOLBY NR to ON. This reduces tape hiss noise.
STOP
MEGA BASS
For heavy and powerful sound
WM-F2065/F2068
TUNING